




Installation Tool

for inserts TR1652/53/62/63/72/73

Installation
Tools

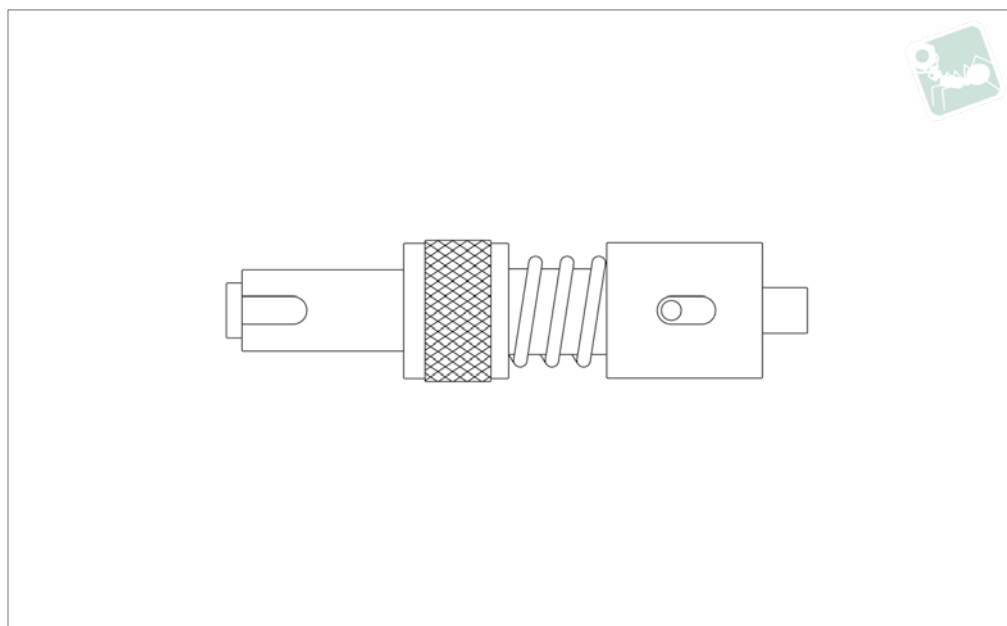

TR1702

INSTALLATION TOOLS

Material

Steel blackened.

Tips

For use with threaded inserts TR1652, TR1653, TR1662, TR1663. TR1672 and TR1673.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .
If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

Important Notes
All dimensions in imperial.

Order No.	For insert of internal thread = d_1	For insert of external thread = d_2
TR1702.0210	10 - 24	5/16 - 18
TR1702.0211	10 - 32	5/16 - 18
TR1702.0220	1/4 - 20	3/8 - 16
TR1702.0221	1/4 - 28	3/8 - 16
TR1702.0230	5/16 - 18	7/16 - 14
TR1702.0231	5/16 - 24	7/16 - 14
TR1702.0240	3/8 - 16	1/2 - 13
TR1702.0241	3/8 - 24	1/2 - 13
TR1702.0250	7/16 - 14	9/16 - 12
TR1702.0251	7/16 - 20	9/16 - 12
TR1702.0260	1/2 - 13	5/8 - 11
TR1702.0261	1/2 - 20	5/8 - 11