




Installation Tool

for inserts TR1654/55/64/65/75/76



Installation
Tools

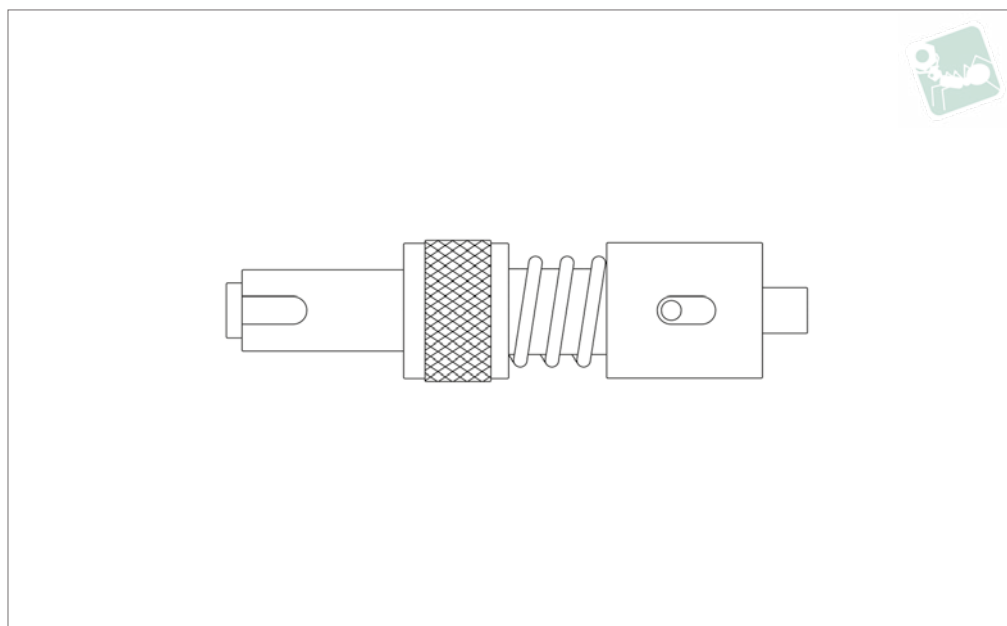

TR1705

INSTALLATION TOOLS

Material

Steel blackened.

Tips

For use with threaded inserts TR1654, TR1655, TR1664, TR1665, TR1675 and

TR1676.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .

If in doubt refer to data tables of insert

where correct "Inst. tool ref" is stated.

Important Notes

All dimensions in imperial.

Order No.	For insert of internal thread = d_1	For insert of external thread = d_2
TR1705.0000	8 - 32	5/16 - 18
TR1705.0010	10 - 24	3/8 - 16
TR1705.0011	10 - 32	3/8 - 16
TR1705.0020	1/4 - 20	7/16 - 14
TR1705.0021	1/4 - 28	7/16 - 14
TR1705.0030	5/16 - 18	1/2 - 13
TR1705.0031	5/16 - 24	1/2 - 13
TR1705.0040	3/8 - 16	9/16 - 12
TR1705.0041	3/8 - 24	9/16 - 12
TR1705.0050	7/16 - 14	5/8 - 11
TR1705.0051	7/16 - 20	5/8 - 11
TR1705.0060	1/2 - 13	11/16 - 11 NS
TR1705.0061	1/2 - 20	11/16 - 11 NS
TR1705.0070	9/16 - 14	13/16 - 16
TR1705.0071	9/16 - 20	13/16 - 16
TR1705.0080	5/8 - 11	7/8 - 14
TR1705.0081	5/8 - 18	7/8 - 14
TR1705.0090	3/4 - 10	1-1/8 - 12
TR1705.0091	3/4 - 16	1-1/8 - 12
TR1705.0100	7/8 - 9	1-1/4 - 12
TR1705.0101	7/8 - 14	1-1/4 - 12
TR1705.0110	1" - 8	1-3/8 - 12
TR1705.0111	1" - 12	1-3/8 - 12