




Installation Tool

for inserts TR1600/01/06/07



Installation
Tools

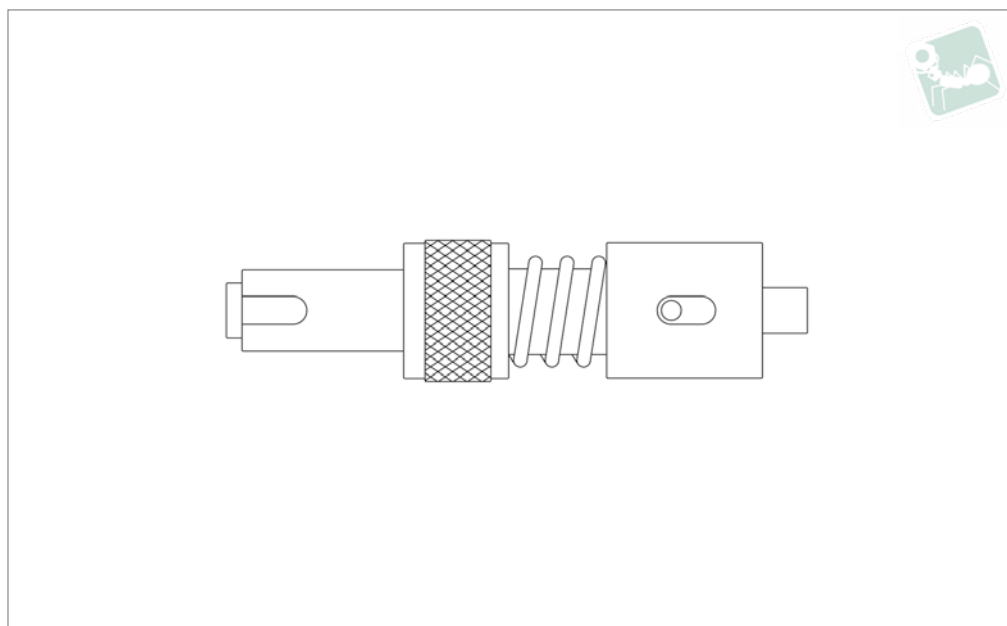

TR1710

INSTALLATION TOOLS

Material

Steel blackened.

TR1601, TR1606 and TR1607.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .

If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

Tips

For use with threaded inserts TR1600,

| Order No. | For insert of internal thread = d_1 | For insert of external thread = d_2 |
|-------------|---------------------------------------|---------------------------------------|
| TR1710.0820 | M 2 x 0,4 | M 4 x 0,7 |
| TR1710.0830 | M2,5 x 0,45 | M 4,5 x 0,75 |
| TR1710.0840 | M 3 x 0,5 | M 5 x 0,8 |
| TR1710.0860 | M 4 x 0,7 | M 6 x 0,75 |