




# Installation Tool

for inserts TR1604/05/10/11

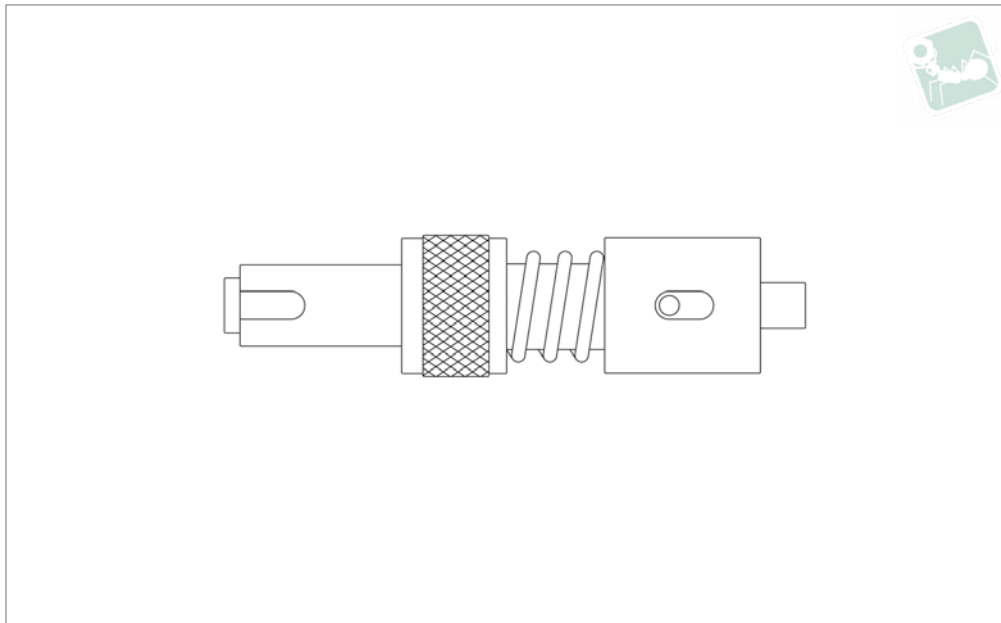

## TR1715

INSTALLATION TOOLS

### Material

Steel blackened.

TR1605, TR1610 and TR1611.

Select installation tool of corresponding insert internal thread  $d_1$  AND external thread  $d_2$ .

If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

### Tips

For use with threaded inserts TR1604,

Order No.	For insert of internal thread = $d_1$	For insert of external thread = $d_2$
TR1715.0630	M 4 x 1,25	M 8 x 1,25
TR1715.0640	M 5 x 0,8	M 10 x 1,25
TR1715.0650	M 6 x 1,0	M 12 x 1,25
TR1715.0660	M 8 x 1,25/M8 x 1,0	M 14 x 1,5
TR1715.0670	M 10 x 1,5/M 10 x 1,25	M 16 x 1,5
TR1715.0690	M 12 x 1,75/M 12 x 1,25	M 18 x 1,5
TR1715.0700	M 14 x 2,0/M 14 x 1,5	M 20 x 1,5
TR1715.0710	M 16 x 2,0/M 16 x 1,5	M 22 x 1,
TR1715.0720	M 18 x 1,5	M 24 x 2,0
TR1715.0730	M 20 x 2,5/M 20 x 1,5	M 30 x 2,0
TR1715.0740	M 22 x 1,5	M 32 x 2,0
TR1715.0750	M24 x 3,0/M 24 x 2,0	M 33 x 2,0