




# Installation Tool

for inserts TR1685 and TR1686

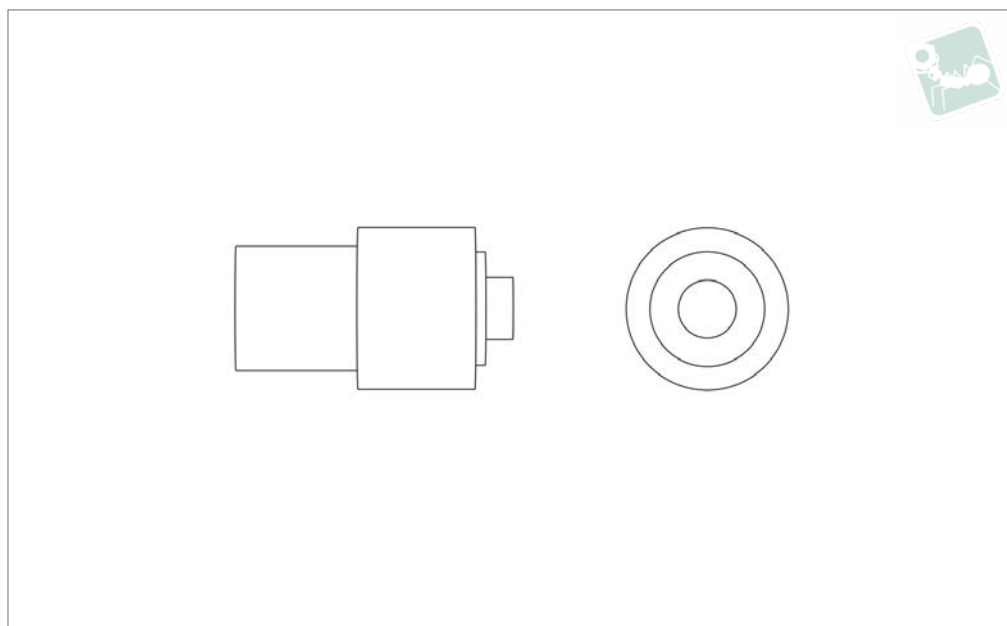

**TR1725**

INSTALLATION TOOLS

**Material**

Steel blackened.

**Tips**

For use with threaded insert TR1685 and TR1686.

Select installation tool of corresponding insert internal thread  $d_1$  AND external thread  $d_2$ .  
If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

**Important Notes**

**All dimensions in imperial.**

Order No.	For insert of internal thread = $d_1$	For insert of external thread = $d_2$
TR1725.0010	10 - 24/ 10 - 32	7/16 - 20
TR1725.0020	1/4 - 20/ 1/4 - 28	1/2 - 20
TR1725.0030	5/16 - 18/ 5/16 - 24	5/8 - 18
TR1725.0040	3/8 - 16/ 3/8 - 24	3/4 - 16
TR1725.0050	7/16 - 14/ 7/16 - 20	7/8 - 14
TR1725.0060	1/2 - 13/ 1/2 - 20	1" - 12